



## Muz Convex Mirror (350Z)



### Installation Instructions

**Congratulations on purchasing the Muz Convex Mirror. Note: Take care not to scratch the mirror. Wear gloves to remove and install the mirror holder.**

#### Tools needed:

- None

1) Adjust the mirror to the upmost position. Carefully pull out the bottom edge of the mirror holder by hand. Once the lower clip releases slide the mirror downward to clear the upper fixing point.

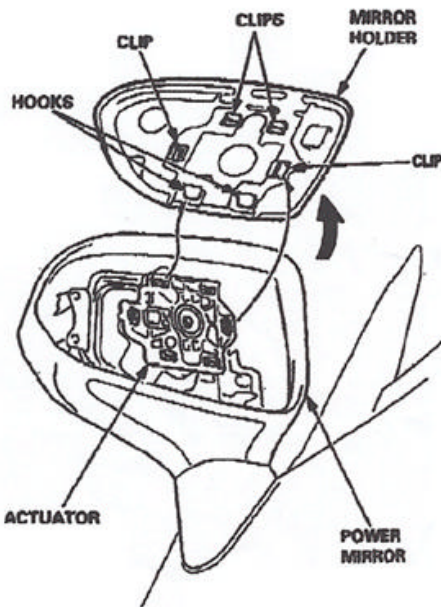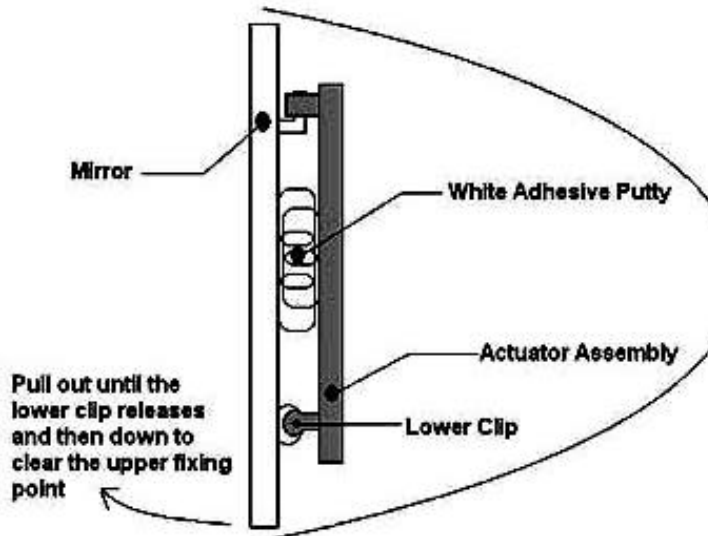

2) Separate the mirror holder from the actuator by slowly pulling them apart.

3) To install new mirror reattach the hooks of the mirror holder to the actuator, then position the mirror holder on the actuator. Carefully push the clip portions of the mirror holder until the mirror holder locks into place.

4) Check the actuator operation.

Congratulations. You have successfully installed the Muz Convex Mirror!

***Thank you for your purchase! We hope you enjoy our product!***

<b>Muz' Accessories</b>	<b>FREE Screensaver!</b>
See our full range of accessories at <a href="http://www.prestigeautoaccessories.com">www.prestigeautoaccessories.com</a>	Download from <a href="http://www.prestigeautoaccessories.com/downloads">www.prestigeautoaccessories.com/downloads</a>