



Muz Billet Injector Cover (S2000)

Installation Instructions

Congratulations on purchasing the Muz Billet Injector Cover. Note: High quality black lobe knobs and stainless bolts have replaced the superseded fasteners shown in some images below.


Tools needed:

- 10mm Socket Wrench


1) Using a 10mm socket remove the two nuts securing the factory cover in place. Take extra care NOT to drop the nuts once you have undone them.



2) It is recommended you disconnect the hose that runs over the top of the cover before removing the factory injector cover. It's possible to remove the cover without disconnecting the hose but not recommended. You do not want to mar the highly polished surface of the cover during installation.

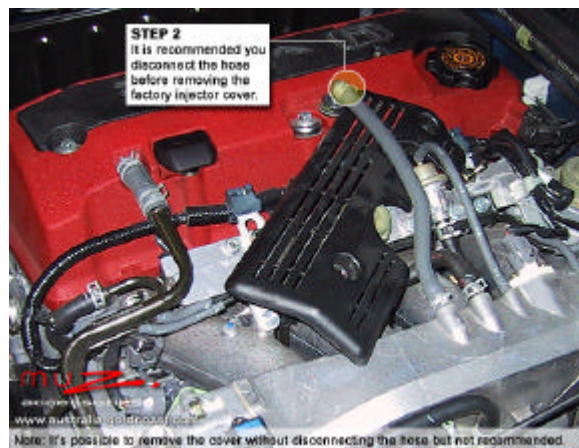


3) Slip a shim (supplied) over each post as shown. The tapered (narrow) end of the shim (spacer) must point upwards.

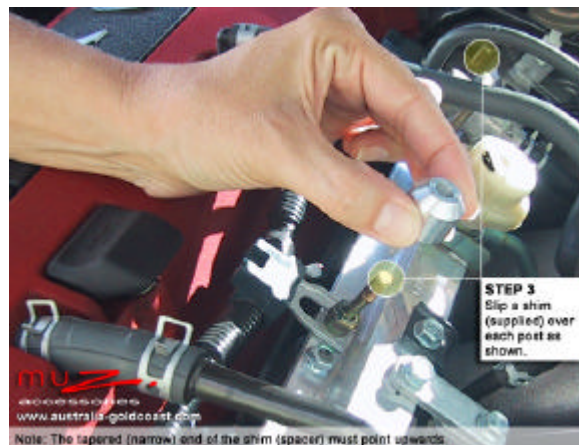

4) Position and align the Aluminium cover carefully (so as NOT to damage the polished finish) over the posts and use a 10mm socket to replace the two nuts securing the new Aluminium cover in place. Re-attach the clamped rubber hose and give your new injector cover a polish.

Congratulations. You have successfully installed the Muz Billet Injector Cover!

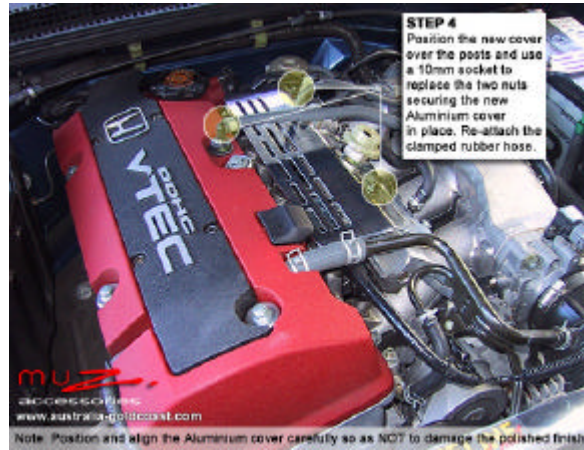

Thank you for your purchase! We hope you enjoy our product!

<i>Muz' Accessories</i> See our full range of accessories at www.prestigeautoaccessories.com	<i>FREE Screensaver!</i> Download from www.prestigeautoaccessories.com/downloads
--	--