



## Muz Trunk Lid Saddlebag (S2000)


### Installation Instructions

**Congratulations on purchasing the Muz Trunk Lid Saddlebag.**

#### Tools needed:

- *Stanley knife (box cutter)*


1) There are 4 Velcro strips (2 male & 2 female) with heat resistant adhesive backing included with your Muz Trunk Lid Saddlebag. Take the first 2 strips (male & female) and join the Velcro sides together so that the backing is facing outwards on both sides. (Do NOT join the strips together by the adhesive backing.)

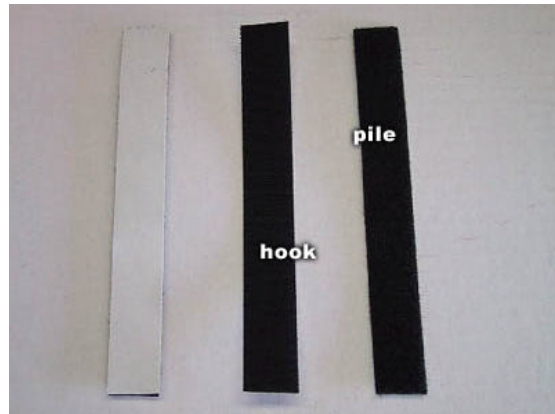

2) Remove the protective strip from one side of each joined Velcro strip and locate on the innermost trunk lid ribs toward the top (latch end) of the trunk lid.




3) If you intend to fasten your saddlebag using the provided cable ties you will now need to take a Stanley knife and cut away the material from the pre-drilled locating holes in the backboard.

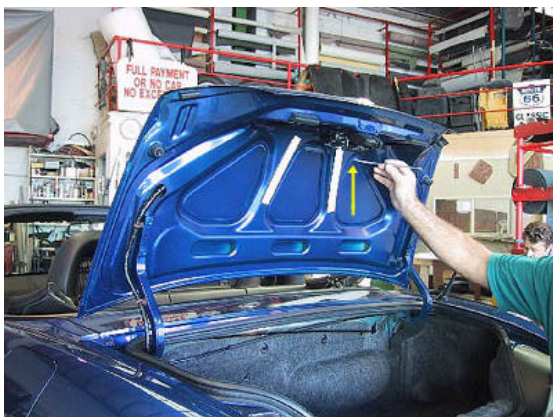


4) Take the cable tie and slide between the rib and the skin of the trunk lid as indicated. Repeat for the other side.

5) Peel the backing tape off the velcro strips ready for the backboard to be afixed to.

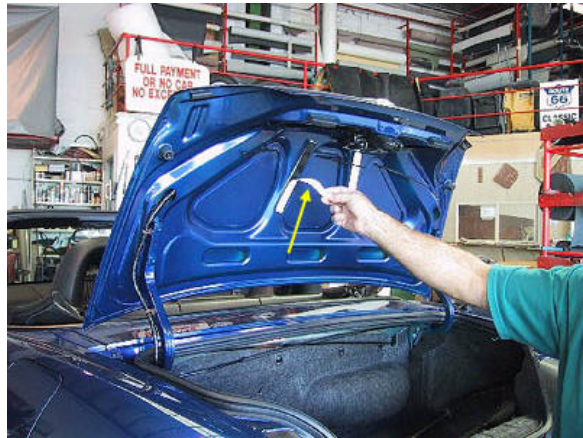

6) Slide the clips on the lower edge of the saddlebag backboard into place over the lower edge of the cutouts in the lower trunk lid rib.

7) Gently push the saddlebag into place against the adhesive backed Velcro at the same time threading the cable ties through the locating holes in the backboard.

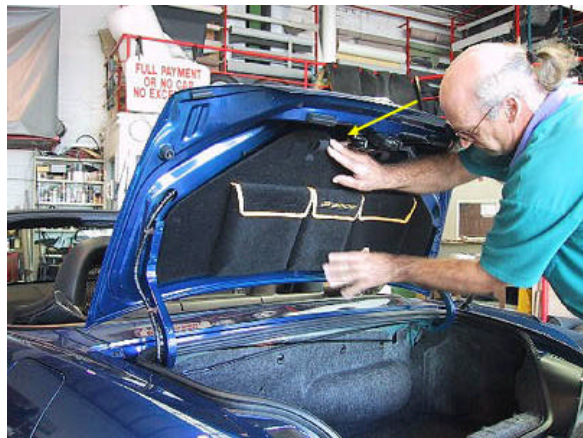

8) Tighten the cable ties and trim off any excess.

Congratulations. You have successfully installed the Muz Trunk Lid Saddlebag!

***Thank you for your purchase! We hope you enjoy our product!***

|   |   |
|---|---|
| <b>Muz' Accessories</b><br>See our full range of accessories at<br><a href="http://www.prestigeautoaccessories.com">www.prestigeautoaccessories.com</a> | <b>FREE Screensaver!</b><br>Download from<br><a href="http://www.prestigeautoaccessories.com/downloads">www.prestigeautoaccessories.com/downloads</a> |
|---|---|