



Muz Trunk Liner (S2000) Installation Instructions


Congratulations on purchasing the Muz Trunk Liner.

Tools needed:

- None

1) If CD changer in trunk start the install by fitting the cutout on the left wing of the main mat over the CD changer.

2) Once in place tuck the flap under the CD changer and work your way toward the RH side of the car.

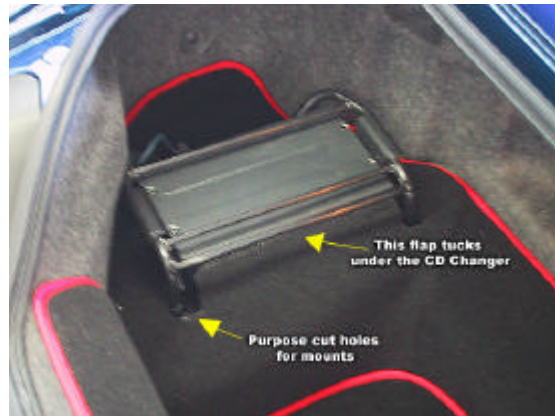

3) If no CD start at the topmost edge of the back of the trunk working your way forward and down into the well. Use the logo and the cutout for the trunk latch to aid you in aligning the mat. Do the sides last.

4) Insert the small base mat and tuck it tightly down around the edges. It is designed to fit firmly and is a separate item to allow access to the storage area beneath. Correctly installed the rubbers on the underside of the Trunk Lid should not touch the mat when the trunk is closed.

Congratulations. You have successfully installed the Muz Trunk Liner!

Thank you for your purchase! We hope you enjoy our product!

Muz' Accessories See our full range of accessories at www.prestigeautoaccessories.com	FREE Screensaver! Download from www.prestigeautoaccessories.com/downloads
---	---