



Muz Aeroscreen (Z3)



Installation Instructions

Congratulations on purchasing the Muz Aeroscreen. Note: High quality black lobe knobs and stainless bolts have replaced the superseded fasteners shown in some images below.

Tools needed:

- Drill
- 5.5mm Drill Bit

1) Remove the speaker plate cover that is located between the two rollbars behind the front seats.

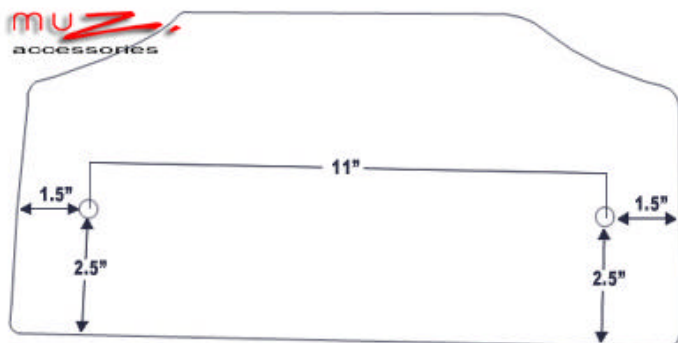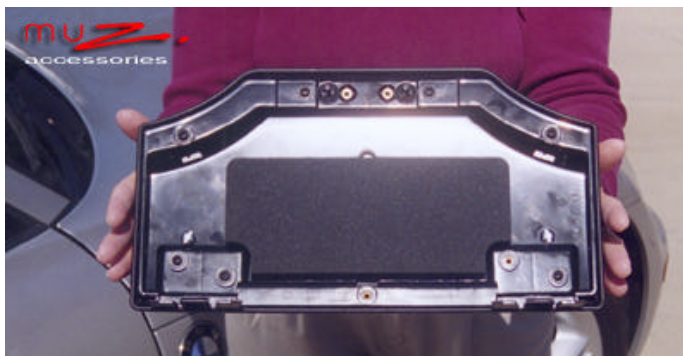

2) Drill two 5.5mm (0.21") holes in the speaker plate. See diagram for the exact specifications of where the holes should be drilled. The drilled holes should be 279.5mm (11") apart from the center of each hole.

3) Insert the provided 5mm X 20mm (0.19"x3/4") stainless bolts through the holes from the underside of the speaker plate.





4) Peel off the bottom protective covering and align aeroscreen on top of speaker plate so that the bolts go through the pre-drilled holes in the aeroscreen.

Peel off the top protective covering and hand tighten the provided clamping knobs to fasten the aeroscreen to the speaker plate.

5) Reattach speaker plate to top of speaker cabinet between rollbars. Press down until speaker plate snaps into place.



Congratulations. You have successfully installed the Muz Aeroscreen!

Thank you for your purchase! We hope you enjoy our product!

Muz' Accessories See our full range of accessories at www.prestigeautoaccessories.com	FREE Screensaver! Download from www.prestigeautoaccessories.com/downloads
---	---